




KING ELECTRICAL MFG. CO.
SEATTLE, WA 98108

PT-2

IN-BUILT THERMOSTAT KIT FOR
KING MODEL **PAW** ELECTRIC
WALL HEATER - DOUBLE POLE



MAIN BREAKER

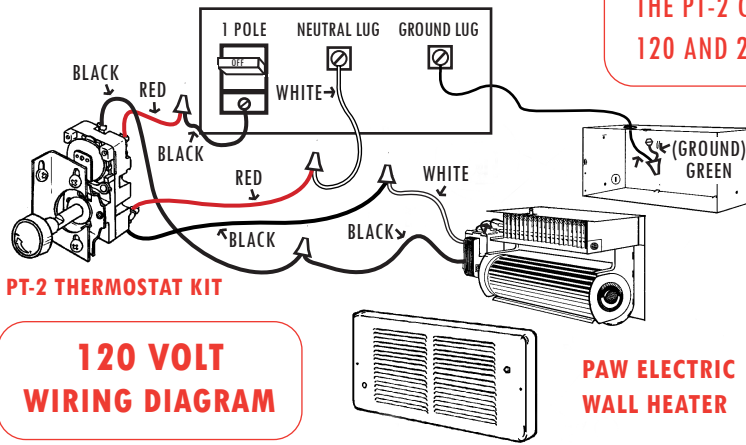


PT-2 THERMOSTAT KIT

120 VOLT WIRING DIAGRAM

PAW ELECTRIC
WALL HEATER

MAIN BREAKER

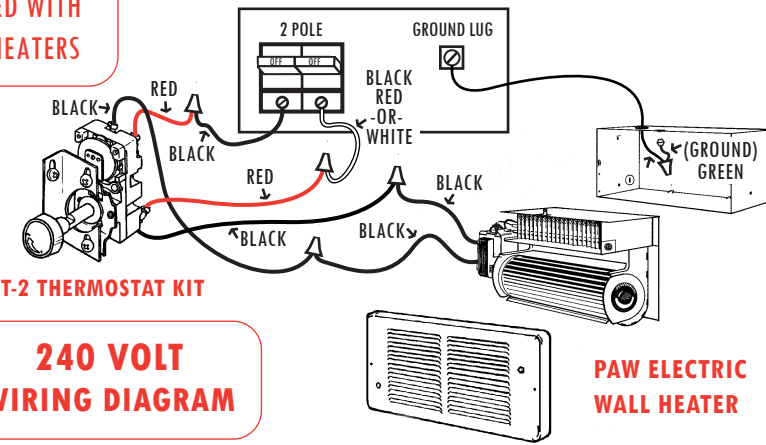

PT-2 THERMOSTAT KIT

240 VOLT WIRING DIAGRAM

PAW ELECTRIC
WALL HEATER


DANGER:

RISK OF SEVERE ELECTRICAL
SHOCK. DISCONNECT POWER
FROM MAIN BREAKER PANEL
FIRST BEFORE INSTALLATION.

FOR USE WITH:
120, 208, 240 VAC / 22 AMP
277 VAC / 18 AMP

TEMPERATURE RANGE: 40° - 90°F


PAW SERIES HEATER WITH PT-2 INSTALLATION

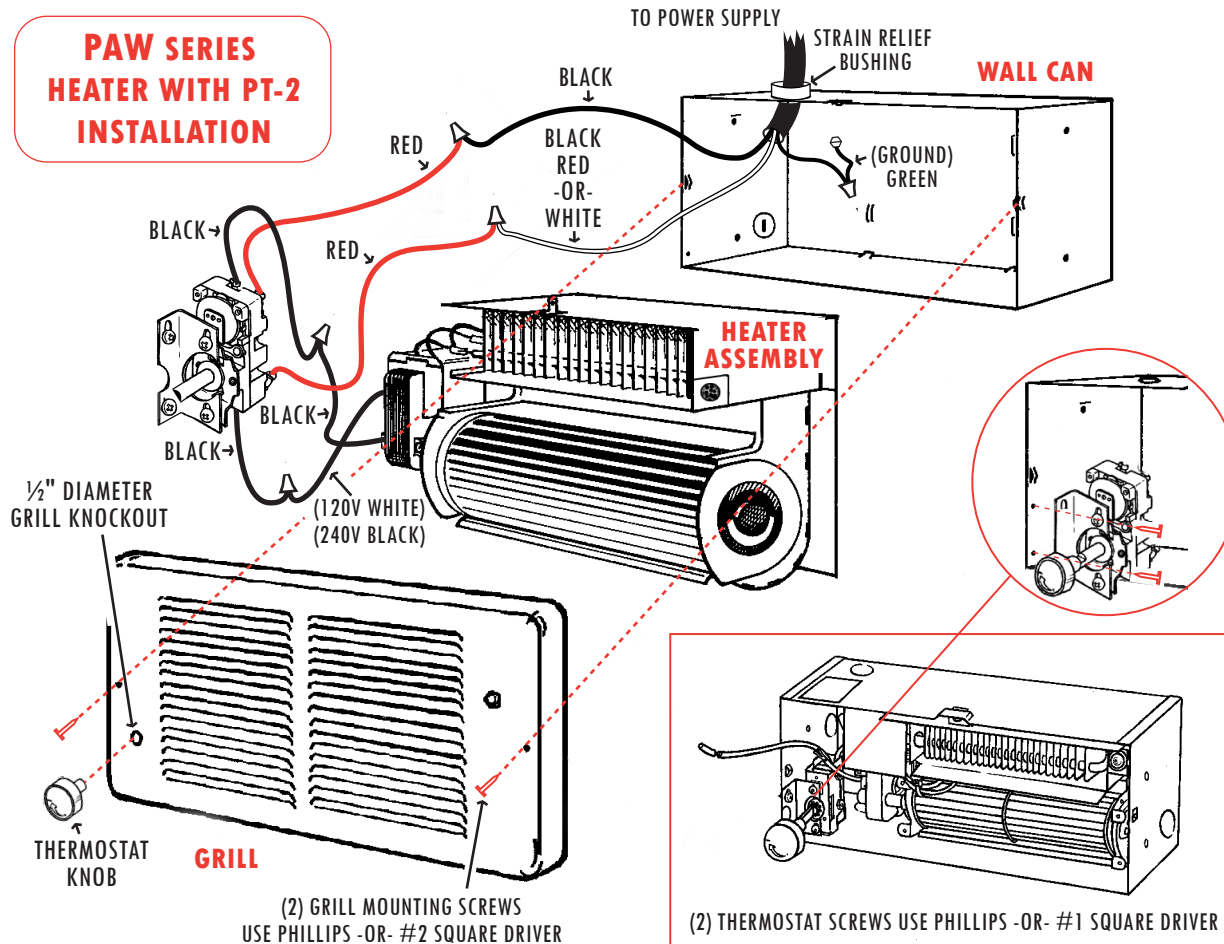

INSTRUCTIONS

1. MOUNT THERMOSTAT WITH 2 SCREWS PROVIDED.
2. COMPLETE WIRING AS SHOWN FOR THE PT-2.
3. INSTALL HEATER ASSEMBLY INTO WALL CAN.
4. REMOVE 1/2" GRILL KNOCKOUT FOR THERMOSTAT SHAFT.
5. MOUNT GRILL WITH 2 SCREWS.
6. PLACE PLASTIC KNOB ON THERMOSTAT SHAFT BY PUSHING KNOB THROUGH GRILL OPENING.

TOOLS:

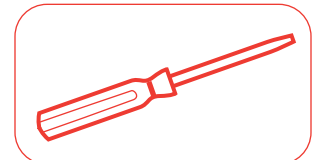

PHILLIPS #1 SQUARE #2 SQUARE



ACCESSORY FOR THE
PAW SERIES HEATER

PT-2



KING ELECTRICAL MFG. CO. · 9131 10TH AVENUE SOUTH · SEATTLE, WA 98108 · TEL: 206.762.0400 · FAX: 206.763.7738 · www.king-electric.com